

## **WALL MOUNTING OF THE PC-STANDARD**

This pace clock can be wall mounted but you will first need to remove the weather cover and digits 1 and 4 (counting left to right).

Determine the location for your pace clock. It is your responsibility to choose a location where the wall composition or mounting structure can support the weight of the pace clock. Use appropriate mounting hardware for the weight of the clock and its environment. The keyhole slots in the back of the clock are .359 inches at the bottom to accommodate the head of the screw, and .172 inches at the top, to accommodate the shank of the screw. Installation must meet all national and local codes.

The weight of the clock is 19 lbs.